


# Operating instructions

High pressure swing check valve

DRI

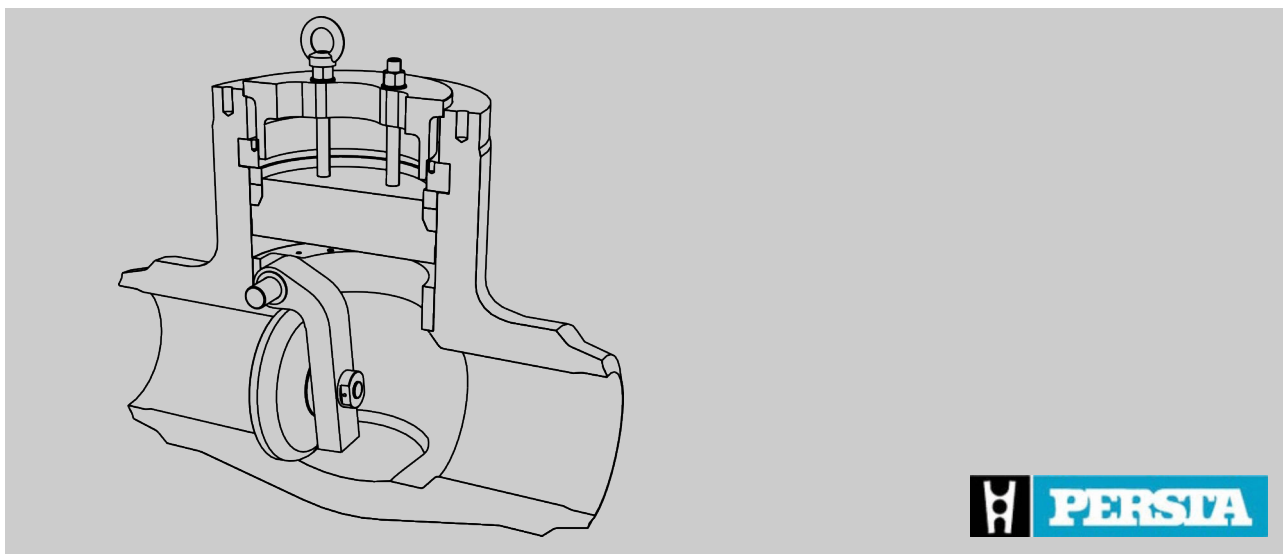

Read the instructions prior to performing any task!

Stahl-Armaturen PERSTA GmbH  
Mülheimer Str. 18  
59581 Warstein-Belecke, Germany  
Telephone: +49 2902 762-02  
Fax: +49 2902 767-03  
Email: [info@persta.de](mailto:info@persta.de)  
Internet: [www.persta.com](http://www.persta.com)  
Translation of the original operating instructions  
Dok.-Nr. 6402.DE.STD.03.2013, 2, en\_GB

### Information about the operating manual

This manual enables safe and efficient handling of the high pressure valve.

The manual is a component of the high pressure valve and must be kept in the vicinity of the high pressure valve where it is available to personnel at all times.

The personnel must have carefully read and understood this manual before performing any tasks. The basic prerequisite for safe work is compliance with all the specified safety notices and instructions.

In addition, the local occupational safety regulations and general safety regulations must be complied with for the high pressure valve's area of use.

The illustrations in this manual are provided as examples only and may deviate from the actual version.



*Although the size and pressure ratings of the valve types vary, the information in these instructions applies generally to all valves, provided nothing to the contrary is specified.*

### Scope of the document

This manual applies to the following versions of the series 640 AB of the high pressure swing check valve DRI:

Designation	Series	Nominal diameter (DN) [mm]	Pressure rate	Class*
DRI 21	640 AB	50–300/250	PD 21	-
DRI 26	640 AB	65–300	PD 25 / PD 40	≤2500
DRI 10–63	640 AB	80–600	PD 10–63	≤4500

\* Assignment number in the pipe construction

### Other applicable documents

- Ignition hazard assessment GA004
- Risk analysis according to Pressure Equipment Directive
- Risk analysis as per the Machinery Directive
- Technical data sheet
- Bolt tightening torques according to the website: [www.persta.com](http://www.persta.com)
- And other documents included in the delivery

**Customer Service - Stahl-Arma-  
turen PERSTA GmbH**

Mülheimer Str. 18

59581 Warstein

Telephone: +49 2902 762-02

Fax: +49 2902 767-03

E-mail: [info@persta.de](mailto:info@persta.de)

### Revision overview

Revision number	Change/Supplemented information	Date
1	Updates to chapter <i>"Intended use"</i> .	05/05/2021

## Table of contents

<b>1</b>	<b>Overview</b> .....	<b>7</b>
<b>2</b>	<b>Safety</b> .....	<b>9</b>
	2.1 Symbols in this manual.....	9
	2.2 Intended use.....	11
	2.3 Safety signs.....	12
	2.4 Residual risks.....	13
	2.4.1 Basic dangers at the workplace.....	13
	2.4.2 Mechanical hazards.....	14
	2.4.3 Thermal dangers.....	14
	2.4.4 Hazards due to hazardous substances and operating materials.....	15
	2.5 Behaviour in the event of an emergency.....	16
	2.6 Responsibility of the operating company.....	16
	2.7 Personnel requirements.....	18
	2.8 Personal protective equipment.....	20
	2.9 Spare parts.....	21
	2.10 Environmental protection.....	22
<b>3</b>	<b>Functional description</b> .....	<b>23</b>
	3.1 Mode of operation of the high pressure swing check valve.....	23
	3.2 Seal to the outside.....	24
	3.3 Connections.....	25
<b>4</b>	<b>Transport and storage</b> .....	<b>27</b>
	4.1 Safety notices for transport and storage.....	27
	4.2 Transport of packages.....	28
	4.3 Storage of the valve.....	30
	4.4 Storage of spare parts.....	30
<b>5</b>	<b>Installation</b> .....	<b>31</b>
	5.1 Safety notices for installation.....	31
	5.2 Before the installation.....	32
	5.3 Installing the valve.....	33
	5.4 After the installation.....	33
	5.4.1 Pickling the valve.....	34
	5.4.2 Painting the valve.....	35
	5.4.3 Executing the system pressure test and leak test... ..	35
	5.4.4 Applying thermal insulation.....	35
<b>6</b>	<b>Commissioning</b> .....	<b>37</b>
	6.1 Safety notices for commissioning.....	37
	6.2 Prior to commissioning.....	39
	6.3 Executing the commissioning process.....	39
<b>7</b>	<b>Maintenance</b> .....	<b>41</b>
	7.1 Safety instructions for maintenance.....	41

7.2	Maintenance schedule.....	44
7.3	Maintenance tasks.....	45
7.3.1	Visually checking the valve.....	45
7.3.2	Replacing the gasket of the pressure sealing bonnet.....	46
7.4	After maintenance.....	51
<b>8</b>	<b>Faults and fault correction.....</b>	<b>53</b>
8.1	Safety notices for fault correction.....	53
8.2	Fault table.....	55
8.3	Fault correction work.....	57
8.3.1	Dismounting the swing check valve.....	57
8.3.2	Mounting the swing check valve.....	59
<b>9</b>	<b>Dismantling, disposal.....</b>	<b>61</b>
9.1	Safety notice for dismantling and disposal.....	61
9.2	Dismantling.....	63
9.3	Disposal.....	64
<b>10</b>	<b>Index.....</b>	<b>65</b>

# 1 Overview

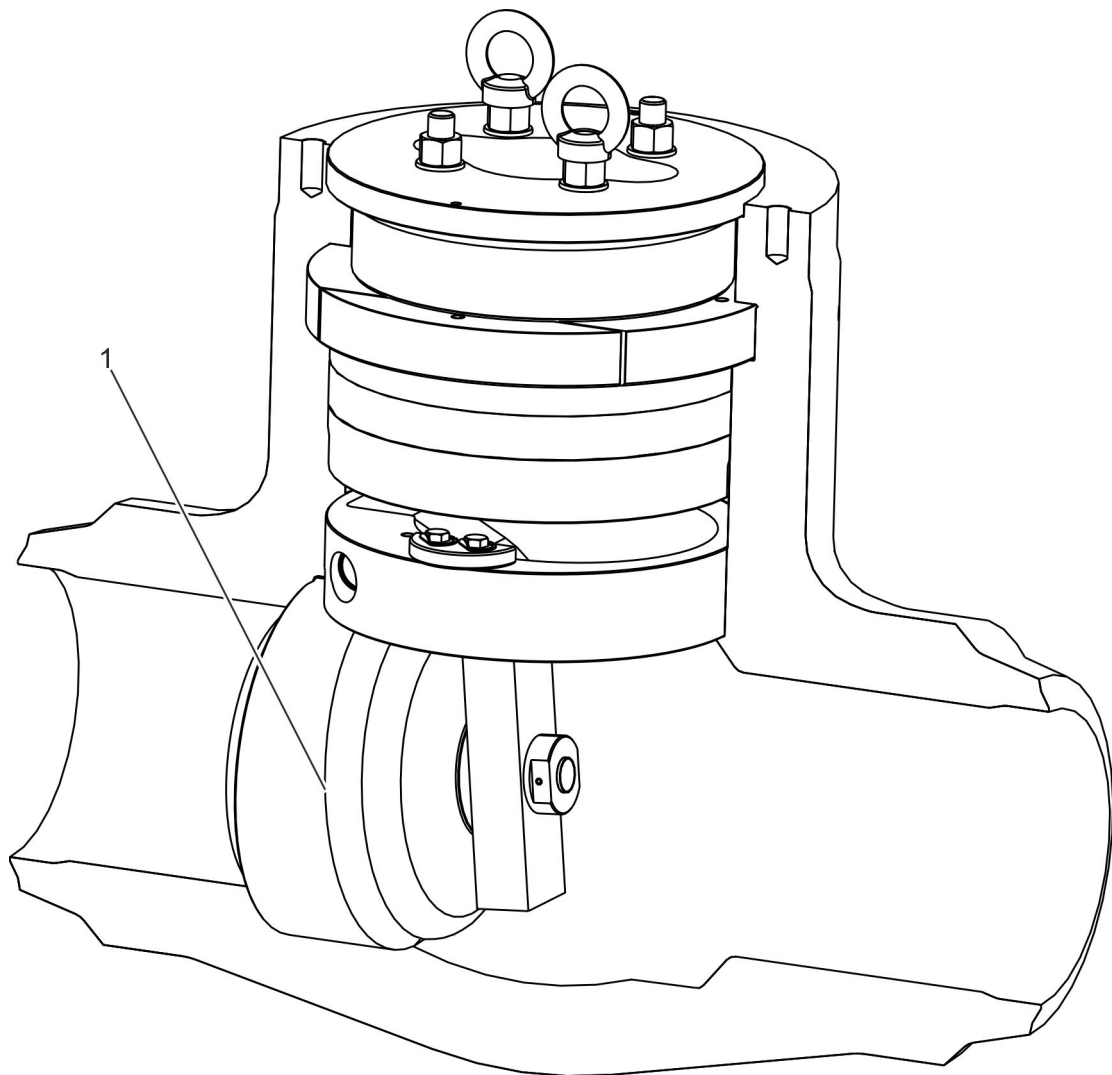


Fig. 1: High pressure swing check valve

**Brief description - high pressure swing check valve DRI**

The valve designated as high pressure swing check valve is designed for installation in pipes.

By using the high pressure swing check valve the flow of a medium is allowed in only one direction within the pipe.

In the other direction the closing element (Fig. 1/1) within the valve is pressed into its seat by the medium flowing back and a return flow is thereby prevented.

**Tools**

The following tools are required for the tasks described in the operating manual:

**Forklift**

Forklift with sufficient load-bearing capacity for transport of valves.

### **Hoist**

Hoist with sufficient load-bearing capacity for transporting valves and components.

### **Pin puncher**

Mandrel-like tool for punching out the segment rings.

### **Pull-off device**

Pull-off device for removing the swing check valve from the body and mounting the swing check valve. The pull-off device grasps through the retaining ring and lifts the retaining ring with the swing check valve out of the body from below. For the installation of the swing check valve the retaining ring with mounted swing element can be lowered into the housing with the pull-off device.

### **Ring bolts**

- Ring bolts to be screwed into the body.
- Serve as attachment points of the valve on the hoist.
- Included in the scope of delivery of the valve.

### **Ring nuts**

- Ring nuts to be screwed onto the stud bolts.
- Serve as attachment points of the valve on the hoist.
- Included in the scope of delivery of the valve.

### **Sling gear**

Functional and approved gear for attaching valves and components on the hoist.



## 2 Safety

### 2.1 Symbols in this manual

#### Safety instructions

Safety instructions are indicated by symbols in this manual. The safety instructions are introduced by signal words that indicate the scope of the hazard.

**DANGER!**

This combination of symbol and signal word indicates a hazardous situation that, if not avoided, will result in death or serious injury.

**WARNING!**

This combination of symbol and signal word indicates a potentially hazardous situation that, if not avoided, may result in death or serious injury.

**CAUTION!**

This combination of symbol and signal word indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury.

**NOTICE!**

This combination of symbol and signal word indicates a potentially hazardous situation that, if not avoided, may result in damage to property.


**ENVIRONMENT!**

This combination of symbol and signal word indicates potential hazards for the environment.

#### Safety instructions in specific instructions

Safety instructions may refer to specific, individual instructions. Such safety instructions are integrated into the specific instruction, so that the flow of reading is not interrupted during performance of the task. The signal words described above are used.

Example:

1.  Loosen the bolt.

2. 



**CAUTION!**

**Risk of getting trapped by the cover!**

Close the cover carefully.

3.  Tighten the bolt.





## Tips and recommendations



*This symbol indicates useful tips and recommendations as well as information on efficient and trouble-free operation.*

## Additional symbols

The following symbols are used throughout these instructions to highlight specific instructions, results, lists, references and other elements:

Symbol	Explanation
	Step-by-step instructions
	Results of an action
	References to sections of these operating instructions and other applicable documents
	Lists without a defined sequence

## 2.2 Intended use

Valves of the specified series are designed for installation in pipes under the following conditions:

- Operation of the valve as an open/close valve.
- Installation in horizontal pipes.
- Installation in vertical pipes with flow direction from bottom to top.
- Operation of the valve with liquid or gaseous media, without particular corrosive, chemical or abrasive impact.
- Temperature change speeds of maximum 6 K/min (6°C/min).
- Maximum number of 1000 load cycles between a depressurized state and the maximum permissible pressure PS.
- Any number of load cycles at pressure fluctuations of up to 10 % of the maximum permissible pressure PS.
- Generally used flow rates depending on the type of medium and the application for which the valve is used.
- Operation of the valve without additional external influences, such as pipe forces, vibrations, wind loads, earthquakes, corrosive environments, fires, traffic loads, decomposition pressures of unstable fluids.
- Operation of the valve only within the limits specified on the rating plate (☞ *“Rating plate” on page 12*).
- If the valve is operated in the creep range, the valve is designed for a maximum operating time of 100,000 h. The valve must be replaced afterwards.
- No temperature increases were considered. In case of use in the hot vapour area, temperature increases must be considered according to the regulations of the operating company.
- The test pressure for a recurring test must not exceed the maximum permitted pressure PS multiplied by 1.3.
- The valve may only be operated if internal pressure loading is predominantly dormant. Additional loads (e.g. stationary thermal stress, unsteady pressure and temperature loads in case of alternating loads or pipe loads) were not considered.

Intended use includes compliance with all the information contained in this manual.

Any use that deviates from the intended use or any other form of use constitutes misuse.

## Misuse



### WARNING!

#### Danger in the event of misuse!

Misuse of the valve can cause dangerous situations.

- Connect the pipes so that they are free of tension.
- Pay attention to the correct installation position of the valve.
- Do not exceed the number of permitted load cycles (☞ *Chapter 2.2 “Intended use” on page 11*).
- Do not use valves as an anchor point.
- Never operate valves at temperatures near or below the freezing point of the pipeline medium.

## 2.3 Safety signs

The following symbols and instruction signs are in the work area. These symbols and instruction signs refer to the immediate vicinity in which they are affixed.



### WARNING!

#### Danger if signs are illegible!

Over time, stickers and signs can become fouled or can become illegible in some other manner, so that dangers are not recognised and necessary operating instructions cannot be complied with. This results in a danger of injury.

- Keep all safety, warning, and operating instructions that are affixed to the device in legible condition.
- Replace damaged signs or stickers immediately.

## Rating plate

The rating plate is on the valve. Depending on the version, the following information is on the rating plate:

- Confirmation number
- Article number
- Year of manufacture
- Nominal diameter
- Nominal pressure/design data

## Flow direction arrow

The flow direction is indicated by an arrow on the valve.

Pipeline medium flowing in the direction of the arrow opens the swing check valve and flows through the valve.

**Customer-specific markings**

Additional markings (e.g. max. temperature limits) are available on customer request.

## 2.4 Residual risks

The valve has been developed and manufactured to the state-of-the-art and in accordance with generally accepted rules of safety. Nevertheless residual risks remain that require careful handling. The residual risks and the resulting behaviours and measures are listed below.

### 2.4.1 Basic dangers at the workplace

**Hazardous areas****DANGER!**

**Life-threatening danger due to failure to comply with the rules of behaviour specified for hazardous areas!**

Depending on the version the valve can be used in hazardous areas. There is life-threatening danger if the rules of behaviour are not complied with within these areas.

- Ensure that tasks on the valve can be executed at the installation site.

**Trip hazard****CAUTION!**

**Danger of injury due to tripping up!**

There is a danger of fall injuries in the area of use of the valve.

- Install cable and connection lines in such a manner that there are no trip hazards.

## 2.4.2 Mechanical hazards

### Heavy weight of the valve



#### **WARNING!**

#### **Danger of injury due to the heavy weight of the valve!**

The heavy weight of the valve, and of its components, can result in severe injuries.

- Transport valves with a suitable hoist or forklift.
- Use approved and functional sling gear.
- Safeguard valves and components from falling over.

## 2.4.3 Thermal dangers

### Thermal dangers



#### **WARNING!**

#### **Danger of injury due to high/low temperatures!**

Depending on the insert of the valve or of the pipe, injuries can occur due to the high or low temperature of the components.

- When working on components or activating final control equipment, wear protective equipment: Protective gloves, protective goggles.
- Prior to performing tasks on these components, allow them to cool down/warm up to ambient temperature.
- Have the protective insulation provided by the operating company attached.

### Danger of freezing



#### **WARNING!**

#### **Danger of injury due to pipes shattering at freezing temperatures!**

As a result of pipes shattering at freezing temperatures, severe injuries can be caused by fluid under high pressure.

- Ensure that the valve is completely empty before it is taken out of service.
- Never operate valves at temperatures close to, or below the freezing point of the pumping medium.

## 2.4.4 Hazards due to hazardous substances and operating materials

### Pumping medium

**WARNING!****Danger of injury due to pumping medium under pressure!**

In operating status, as well as in decommissioned status, depending on the version of the valve, injuries can occur due to medium escaping under high pressure.

- Do not unscrew threaded connections.
- If threaded connections are loose, inform the operating company and have the pipe section in question shut-off.
- If threaded connections are loose have the cause for this clarified and eliminated. If necessary have the manufacturer check the valve.

**WARNING!****Pumping medium is a health hazard!**

Contact with the pumping medium can have health implications.

- Handle pumping medium in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped pumping medium without delay and dispose of it in an environmentally responsible manner.

### Pickling medium

**WARNING!****Pickling medium is a health hazard!**

Direct contact with the pickling medium used can have health implications.

- Handle pickling medium in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped pickling medium without delay and dispose of it in an environmentally responsible manner.

### Anticorrosive



#### **WARNING!**

##### **Anticorrosive is a health hazard!**

Direct contact with the anticorrosive used can have health implications.

- Handle anticorrosive in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped anticorrosive without delay and dispose of it in an environmentally responsible manner.

### Damage of sealing surfaces and slide faces



#### **NOTICE!**

##### **Damage of sealing surfaces and slide faces due metallic processing of sealing surfaces and slide faces!**

The metallic processing of sealing surfaces and slide faces and valve parts can cause material damage and valve malfunction.

- Sealing surfaces and slide faces of gaskets must not be
  - scratched with a scraper,
  - processed with wire brushes.
- Sealing surfaces and slide faces must be
  - sanded off with emery cloth,
  - processed with suitable abrasive tools or
  - scraped off with plastic tools/wooden tools.

## 2.5 Behaviour in the event of an emergency

1. ➤ Shut off the pipe sections affected.
2. ➤ Comply with the plant regulations.

## 2.6 Responsibility of the operating company

### Operating company

The operating company is the company that operates the valve for commercial or economic purposes itself or that provides it to a third party for use, and that, during operation, bears the legal product responsibility for protection of the user, personnel or third parties.



**Obligations of the operating company**

The valve is used commercially. The operating company of the valve is therefore subject to the legal occupational health and safety obligations.

In addition to the safety instructions in this manual, the local occupational health and safety, accident prevention and environmental protection regulations that apply to the valve's area of application must be observed.

In this regard, the following applies in particular:

- The operating company is responsible for the installation and operation of the valve in the pipe.
- The operating company must ensure that any dangerous situations caused by the operating conditions are avoided by installing additional safety systems.
- The operating company must obtain information about the applicable occupational health and safety regulations and, in a hazard assessment, identify the additional hazards that may exist at the installation site of the valve due to the specific working conditions. The operating company must integrate this information into operating instructions for the operation of the valve.
- The operating company must ensure that the operating instructions it has drawn up comply with the currently applicable legislation throughout the operating period of the valve and, if necessary, adapt the operating instructions.
- The operating company must clearly define and assign the responsibilities for installation, operation, fault correction, maintenance and cleaning.
- After the installation, the operating company must ensure the proper pickling of the valve.
- The operating company must provide equipment that ensures the safe transition of the valve into a depressurised state.
- The operating company must provide equipment that can completely drain the pipe sections in which the valve is installed as well as the valve itself.
- The operating company must ensure that all personnel who are to handle the valve have read and understood this manual. In addition, the operating company must train the personnel and inform them of the hazards at regular intervals.
- The operating company must provide the required protective equipment for the personnel and instruct the personnel that wearing the required protective equipment is compulsory.
- The operating company must install additional protective devices around the valve if contact with the valve can result in injuries due to the medium in the pipe system.

The operating company is also responsible for keeping the valve in proper working order at all times. Therefore, the following applies:

- The operating company must ensure that the maintenance intervals described in these instructions are complied with.

In the case of valves with different pipe connections on the inlet and outlet ends, the operating company must ensure that when opening the valve the respective pipe connection is not exposed to impermissibly high pressure or an impermissibly high temperature.

## 2.7 Personnel requirements

**WARNING!****Danger of injury due to inadequate personnel qualification!**

If unqualified personnel perform tasks on the machine or are present in the danger zone, dangers occur that can cause severe injury and significant material damage.

- Only have activities performed by personnel who are qualified to perform these activities.
- Keep unqualified personnel away from the danger zones.

In this manual the qualifications of personnel for the various activity areas are cited below:

**Disposal contractor**

A disposal contractor is a company qualified in accordance with local regulations to collect, transport, store, handle, recycle or dispose of waste and recyclables.

**Forklift truck driver**

The forklift truck driver has demonstrated to the operator their skills in driving industrial trucks controlled by a sitting or standing operator and has been assigned to do this by the operator in writing.

**Industrial mechanic (high pressure valves)**

Based on their specialised training, skills, experience and knowledge of the applicable standards and provisions, the industrial mechanic is able to carry out the work assigned to them on installations and valves in the high pressure area and to independently identify potential hazards and avoid them.

They have been instructed by the operator on how to handle the plant and receive regular training.

The industrial mechanic is capable of maintaining and repairing installations and valves in the high pressure area independently.

**Pipeline engineer**

Based on their specialised training, skills, experience and knowledge of the applicable standards and provisions, the pipeline engineer is able to carry out the work assigned to them and to independently identify potential hazards and avoid them.

The pipeline engineer is able to install valves safely and properly in the pipework.

**Trained person (hoist)**

The trained person (hoist) has been instructed, and can provide evidence of this, by the operator on how to handle the hoist and sling gear and the potential hazards associated with improper behaviour.

**Trained person (operator)**

The trained person (operator) has been instructed, and can provide evidence of this, by the operating company on how to handle the plant and the potential hazards associated with improper behaviour. This knowledge will be refreshed in regular training provided by the operating company. The trained person (operator) is familiar with the content of this manual.

The trained person (operator) is familiar with the operating company's plant and the associated hazards. They are assigned with operating the plant by the operating company.

**Basic requirements**

Only persons from whom it is expected that they reliably perform their work are approved as personnel. Persons whose capacity to react is impaired, for example, through drugs, alcohol, or medication are not approved as personnel.

Comply with the age-specific and job-specific regulations that apply at the site of implementation when selecting personnel.

**Unauthorised persons****WARNING!****Risk of fatal injury for unauthorised persons due to hazards in the danger zone and work area!**

Unauthorised persons who do not satisfy the requirements described here are not aware of the hazards in the work area. Consequently there is a danger of severe or fatal injuries for unauthorised persons.

- Keep unauthorised persons away from the danger zone and work area.
- If in doubt, speak to these persons and instruct them to leave the danger zone and work area.
- Interrupt tasks as long as unauthorised persons are present in the danger zone and work area.

**Instruction**

The operating company must instruct personnel on a regular basis. For better tracking an instruction log must be maintained with at least the following content:

- Date of the instruction
- Name of the instructed person
- Content of the instruction
- Name of the instructor
- Signatures of the instructed person and of the instructor

## 2.8 Personal protective equipment

Personal protective equipment is used to protect personnel from impairments to health and safety at work.

During the various tasks performed on and with the machine, personnel must wear personal protective equipment, to which special reference is made in the individual sections of this manual.

### Description of the personal protective equipment

The personal protective equipment is described below:



#### Chemical resistant safety gloves

Chemical resistant safety gloves are intended to protect hands against aggressive chemicals.



#### Industrial hard hat

Industrial hard hats protect the head from falling objects, swinging loads and impacts on stationary objects.



#### Protective gloves

Protective gloves protect hands from friction, abrasion, puncture wounds, or deeper injuries, as well as from contact with hot surfaces.



#### Protective work clothing

Protective work clothing is tight-fitting work clothing with low resistance to tearing, with tight sleeves, and without projecting parts.



#### Safety footwear

Safety footwear protects the feet from crushing injuries, falling parts and slipping on a slippery substrate.



#### Safety goggles

The protective goggles protect the eyes from flying parts and liquid splashes.

## 2.9 Spare parts

### Incorrect spare parts

**WARNING!****Risk of injury if the wrong spare parts are used!**

Using the wrong or defective spare parts may pose a hazard for personnel, or result in damage, malfunctions or even total failure.

- Only use genuine spare parts from Stahl-Armaturen PERSTA GmbH or spare parts approved by Stahl-Armaturen PERSTA GmbH.
- If you have any questions or if anything is unclear, always contact our customer service organisation (contact details on page 3).


### Selecting spare parts

**Spare parts recommendation in the scope of delivery**

*The spare parts recommendation is included in the scope of delivery of the valve.*

### Before installation

**Storage of spare parts**

*Please see  Chapter 4.4 "Storage of spare parts" on page 30 for information on storing spare parts.*

### Ordering spare parts

Order spare parts from Stahl-Armaturen PERSTA GmbH, with specification of

- valve type,
- Year of manufacture,
- Nominal diameter,
- Nominal pressure,
- Material,
- Article number,
- Confirmation number,
- Consignment number

(if possible). See page 3 for contact details.

## 2.10 Environmental protection



### **ENVIRONMENT!**

#### **Hazards for the environment due to improper handling of environmentally-harmful substances!**

If environmentally-harmful substances are handled incorrectly, particularly if they are disposed of incorrectly, significant environmental damage can occur.

- Always comply with the instructions cited below for handling and disposal of environmentally-harmful substances.
- Comply with the guidelines for disposal of environmentally hazardous substances issued by the operating company.
- If environmentally-harmful substances inadvertently get into the environment, immediately implement suitable measures. If in doubt, inform the responsible municipal authorities of the damage and ask about suitable measures that should be implemented.

### **Substances used**

#### **The following environmentally harmful substances are used:**

- Residue of the pipeline medium
- Pickling medium
- Anticorrosive

### 3 Functional description

#### 3.1 Mode of operation of the high pressure swing check valve

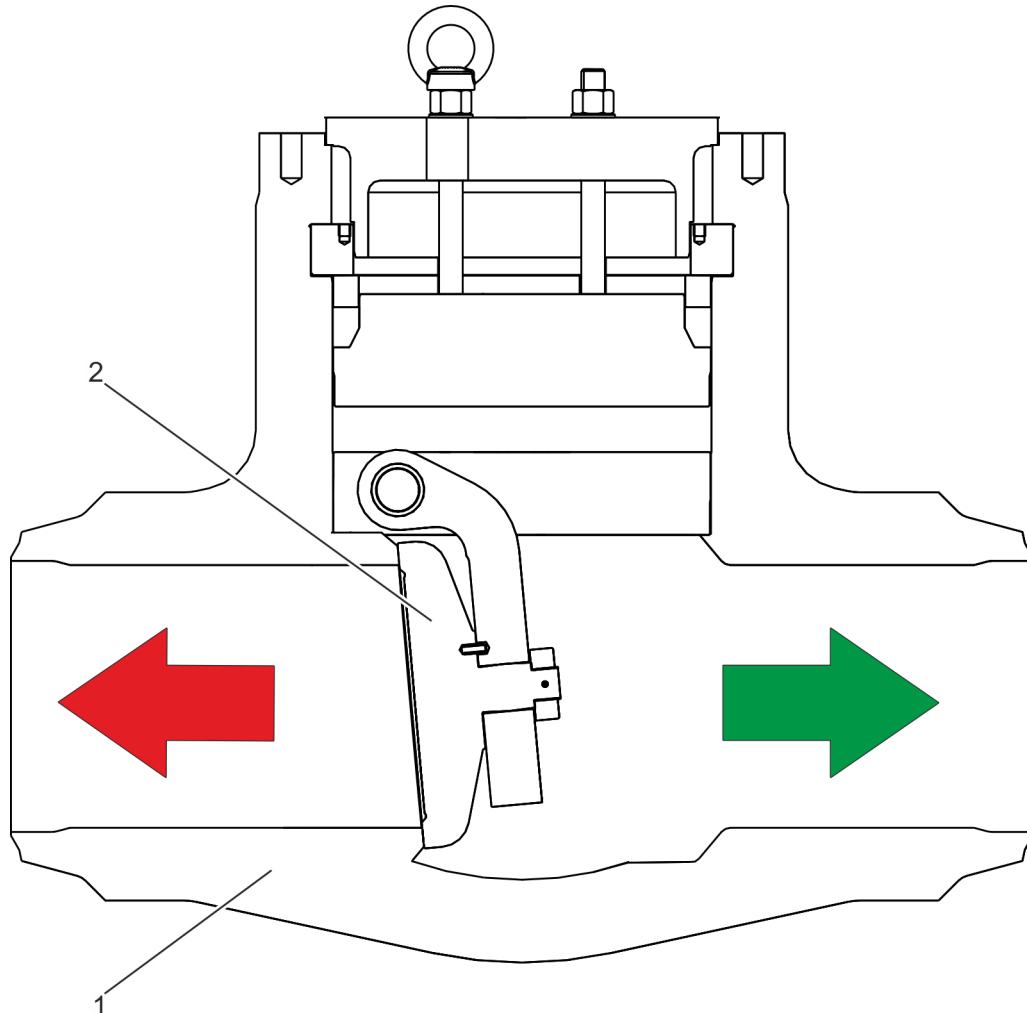




Fig. 2: Sectional view - high pressure swing check valve

- |   |                               |   |                   |
|---|-------------------------------|---|-------------------|
|  | Flow direction                | 1 | Body              |
|  | Return flow direction blocked | 2 | Swing check plate |

In the body (Fig. 2/1) a pivoting swing check plate (Fig. 2/2) separates the inlet from the outlet side of the valve.

As soon as medium enters into the valve in the flow direction () , it pushes the swing check valve upward and medium flows through the entire body.

If the flow direction of the pumping medium reverses () , the swing check valve closes the valve.

### 3.2 Seal to the outside

#### Pressure sealing bonnet

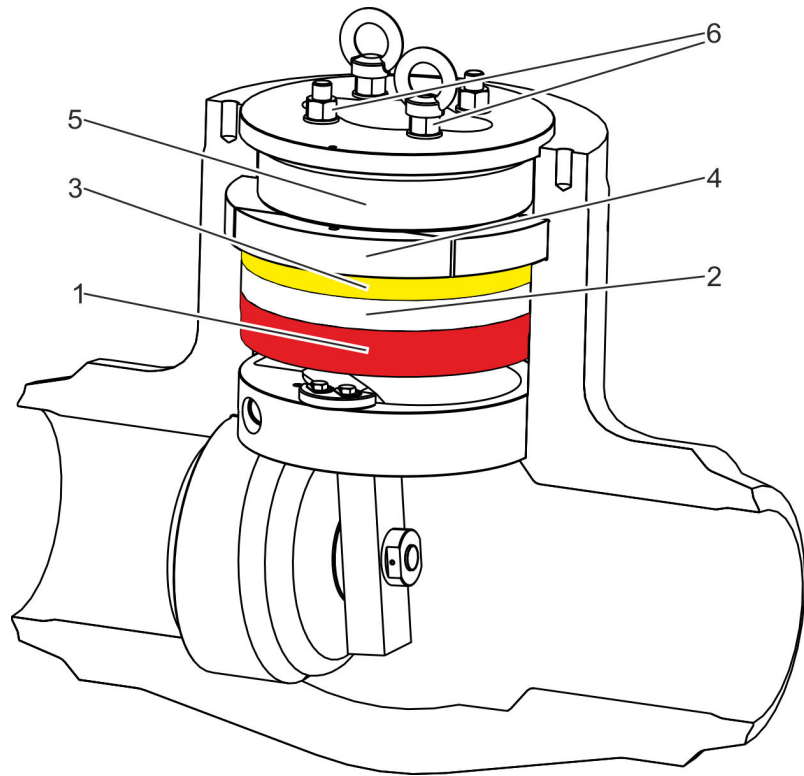


Fig. 3: Pressure sealing bonnet

- 1 Cover
- 2 Elastic gasket ring
- 3 Support ring
- 4 Segment ring
- 5 Clamping lid
- 6 Screws

The body is sealed against the environment via the pressure sealing bonnet.

The axial force generated by the internal pressure in the body acts on the elastic gasket ring (Fig. 3/2) via the cover (Fig. 3/1). The elastic gasket is pressed together by the axial force, is transversely deformed and seals against the body in the radial direction. The required sealing force is not generated by the screws, rather it is generated by the internal pressure. The screws (Fig. 3/6) are only used to pre-tension the sealing connection and in operation are only tightened hand tight. The axial force generated by the internal pressure is transmitted to the segment ring (Fig. 3/4), which consists of several parts, via the support ring (Fig. 3/3). The segment ring transmits the force with positive fit to the body of the valve.

The segment ring is held in the body groove by the clamping lid (Fig. 3/5).



### 3.3 Connections

#### Connection in the pipe

Depending on the version the high pressure swing check valve can be mounted in the pipe, as

- Butt-weld valve,
- Flanged valve,
- Special connection valve



## 4 Transport and storage

### 4.1 Safety notices for transport and storage

#### Heavy weight of the valve

**WARNING!****Danger of injury due to the heavy weight of the valve!**

The heavy weight of the valve, and of its components, can result in severe injuries.

- Transport valves with a suitable hoist or forklift.
- Use approved and functional sling gear.
- Safeguard valves and components from falling over.

#### Suspended loads

**WARNING!****Danger of injury due to suspended loads!**

Suspended loads can cause dangerous situations that can result in severe injuries.

- Do not step under suspended loads.
- Wear protective equipment: Industrial hard hat, safety footwear.
- Transport loads as close to the ground as possible.
- Only use approved sling gear and hoists.
- Ensure that hoist and sling gear have sufficient load-bearing capacity.

#### Improper transport

**NOTICE!****Material damage due to improper transport!**

Valves can fall or tip over if transported improperly. This can cause considerable material damage.

- When unloading valves at delivery, as well as for inner-company transport, proceed carefully and pay attention to the symbols and instructions on the packaging.
- If present: Use the provided ring bolts and ring nuts.
- Protect valves from impacts.
- Do not touch valves.
- Only remove the packaging just before installation.

## 4.2 Transport of packages

Depending on the size, valves are delivered individually or on a pallet.

### Transporting individual valves




#### **Using ring bolts/ring nuts**

*Depending on the version, ring nuts and/or ring bolts are included in the scope of delivery.*

- *Mount the ring nuts for transporting the valve with the inserted cover.*
- *Use the ring bolts for attaching the body to the hoist without inserted cover.*

### Transporting the valve with the inserted cover


- |                       |                          |
|-----------------------|--------------------------|
| Personnel:            | ■ Trained person (hoist) |
| Protective equipment: | ■ Industrial hard hat    |
|                       | ■ Protective gloves      |
|                       | ■ Safety footwear        |
| Special tool:         | ■ Sling gear             |
|                       | ■ Hoist                  |
|                       | ■ Ring nuts              |

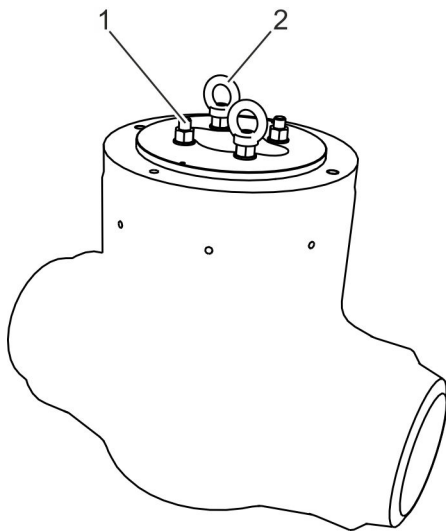

**Fig. 4: Fastening the ring nuts on the cover**

- 1.** ➤ Screw the supplied ring nuts (Fig. 4/2) onto the stud bolts (Fig. 4/1) of the cover.
- 2.** ➤ Ensure that the thread of the ring nuts (Fig. 4/2) is fully screwed onto the stud bolts (Fig. 4/1).
- 3.** ➤ Fasten the ring nuts (Fig. 4/2) onto the hoist with suitable sling gear.
- 4.** ➤ Slowly lift the valve and identify the position of the centre of gravity.
- 5.** ➤ Transport the valve as close to the ground as possible.
- 6.** ➤ After setting down the valve, safeguard it from falling over.

### Transporting the valve without the inserted cover

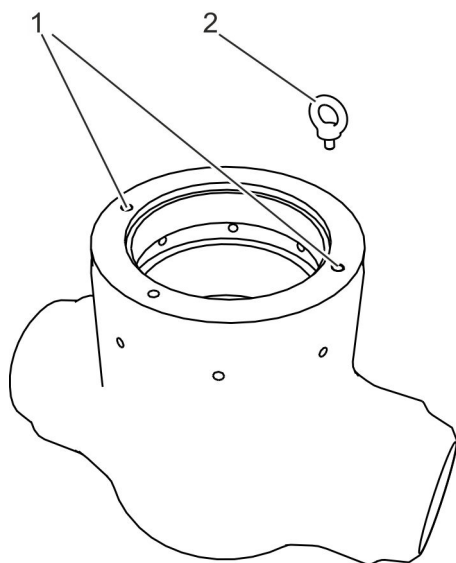

*Fig. 5: Fastening the ring bolts on the body*

Personnel:	■ Trained person (hoist)
Protective equipment:	■ Industrial hard hat
	■ Protective gloves
	■ Safety footwear
Special tool:	■ Sling gear
	■ Hoist
	■ Ring bolts

- 1.** ➤ Screw the supplied ring bolts (Fig. 5/2) into the thread openings (Fig. 5/1) of the body.
- 2.** ➤ Ensure that the thread of the ring bolts (Fig. 5/2) is fully screwed into the body.
- 3.** ➤ Fasten the ring nuts (Fig. 5/2) onto the hoist with suitable sling gear.
- 4.** ➤ Slowly lift the valve and identify the position of the centre of gravity.
- 5.** ➤ Transport the valve as close to the ground as possible.
- 6.** ➤ After setting down the valve, safeguard it from falling over.

### Transport on a pallet

Personnel:	■ Forklift truck driver
	■ Trained person (hoist)
Protective equipment:	■ Industrial hard hat
	■ Protective gloves
	■ Safety footwear
Special tool:	■ Sling gear
	■ Hoist
	■ Forklift

- 1.** ➤ Ensure that the valve is fixed in place on the pallet.
- 2.** ➤ Transport the pallet to the installation location.
- 3.** ➤ Unload heavy valves from the pallet with a suitable hoist and further transport.

### 4.3 Storage of the valve

#### Storage of the valve

Store valves under the following conditions:

- Do not store outdoors.
- Store in a dry and dust-free location.
- Do not expose to any aggressive media.
- Protect from direct sunlight.
- Avoid mechanical vibrations.
- Storage temperature: 15–35°C.
- Relative humidity: max. 60%.
- Check the status of the protective caps attached in the factory. Replace protective caps if necessary.
- When storing for longer than 3 months, check the general condition of all parts and the packaging on a regular basis. Touch up or reapply anticorrosives as needed.



*It may be the case that storage instructions are affixed to the packages that extend beyond the requirements cited here. Comply with these instructions accordingly.*

### 4.4 Storage of spare parts



#### **NOTICE!**

#### **Material damage due to reduced service life if stored incorrectly!**

Due to incorrect storage of soft-sealing spare parts, the service life may be reduced.

- Store soft-sealing elements, plastics or lubricants in a dry location at room temperature where they are protected against light.

## 5 Installation

### 5.1 Safety notices for installation

#### Faulty installation

**WARNING!****Danger due to incorrectly installed valve!**

Faulty installation can result in injuries due to malfunction of the valve.

- Pay attention to the flow direction for valves.
- For butt-weld valves
  - Fasten the welding counterpole on the body, if possible in the vicinity of the welding point,
  - Execute the welding and the subsequent heat treatment in compliance with the valid welding regulations,
  - Partially execute the thermal treatment.

#### Wrong screw tightening torque

**WARNING!****Danger due to the wrong screw tightening torque!**

The tightening torques of the threaded connections on the valve have been calculated and applied by the manufacturer. Hazards can occur due to unscrewing and subsequent tightening if the wrong tightening torques are used.

- Do not unscrew threaded connections on the valve.
- For maintenance tasks or when unscrewing threaded connections, contact
  - Stahl-Armaturen PERSTA GmbH customer service (contact details p. 3) to request the tightening torques, specifying the serial number, or
  - refer to the manufacturer's website (address on page 2).

## Heavy weight of the valve



### WARNING!

#### Danger of injury due to the heavy weight of the valve!

The heavy weight of the valve, and of its components, can result in severe injuries.

- Transport valves with a suitable hoist or forklift.
- Use approved and functional sling gear.
- Safeguard valves and components from falling over.

## 5.2 Before the installation

- Personnel:                   ■ Pipeline engineer
- Protective equipment:   ■ Protective work clothing
- Protective gloves
- Industrial hard hat
- Safety footwear

1. ▶ Check design parameters and material.



### CAUTION!

#### Danger of injury due to falling clamping lid!

2. ▶ Remove any protective caps and preservation agent from the valve.
3. ▶ Remove any protective caps and preservation agent from the valve.
4. ▶ Pay attention to the flow direction (↻ “Flow direction arrow” on page 12).
5. ▶ Ensure that there are no objects or materials in the interior of the valve.



### 5.3 Installing the valve

- Personnel:
- Pipeline engineer
  - Trained person (hoist)
- Protective equipment:
- Protective work clothing
  - Protective gloves
  - Industrial hard hat
  - Safety footwear
- Special tool:
- Sling gear
  - Hoist

1. ➤ Prepare the respective pipe section for the installation.
2. ➤ Use a hoist (☞ *“Transporting individual valves” on page 28*) to bring the valve into the installation position.
3. ➤ Ensure that the customer-provided pipes are free of tension.
4. ➤ Ensure that the customer-provided pipes are free of external forces and torques.
5. ➤ Check butt-welding ends and flange sealing surfaces for damage and cleanliness.
6. ➤ Centre the connection flange.
7. ➤ Use connection elements and sealing elements made of permissible materials.
8. ➤ Depending on the type of connection, weld in or flange on the valve in the correct flow direction and installation position.
9. ➤ Screw fasten all flange bores with connection elements using the permissible tightening torque.
10. ➤ Ensure the seal of the pipe and the valve.

### 5.4 After the installation

#### Harmful substances


**WARNING!**
**Pickling medium is a health hazard!**

Direct contact with the pickling medium used can have health implications.

- Handle pickling medium in accordance with the instructions in the manufacturer’s safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped pickling medium without delay and dispose of it in an environmentally responsible manner.



**WARNING!**

**Gloss paint is a health hazard!**

Direct contact with the gloss paint used can have health implications.

- Handle gloss paint in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles.



**WARNING!**

**Anticorrosive is a health hazard!**

Direct contact with the anticorrosive used can have health implications.

- Handle anticorrosive in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped anticorrosive without delay and dispose of it in an environmentally responsible manner.

## 5.4.1 Pickling the valve



*It is possible to pickle the valve in many ways.*

*Ensure that the operating company's specialised personnel pickle the valve.*

- Personnel:                   ■ Pipeline engineer
- Protective equipment:   ■ Safety goggles
- Protective work clothing
- Chemical resistant safety gloves
- Safety footwear

- 1.** → Properly pickle the valve.
- 2.** → Completely remove the pickling medium through rinsing.
- 3.** → Ensure that the pickling medium is completely flushed out of the dead spaces in the valve.

### 5.4.2 Painting the valve



*Ensure that the operating company's specialised personnel paint the valve.*

*Use suitable (compatible) painting systems.*

### 5.4.3 Executing the system pressure test and leak test

- Personnel: ■ Pipeline engineer
- Protective equipment: ■ Industrial hard hat  
 ■ Safety goggles  
 ■ Protective work clothing  
 ■ Protective gloves  
 ■ Safety footwear

1. ➤ Execute tests in accordance with local regulations.
2. ➤ Release the pipe after successful tests.
3. ➤ For longer idle periods after the hydrostatic pressure test, completely open the valve.
4. ➤ For longer idle periods after the hydrostatic pressure test, replace the anticorrosive in consultation with the manufacturer.

### 5.4.4 Applying thermal insulation



***System-specific equipment***

*Depending on the system, it may be necessary to equip the pipe or the valve with thermal insulation.*

- Personnel: ■ Pipeline engineer
- Protective equipment: ■ Safety goggles  
 ■ Protective work clothing  
 ■ Protective gloves  
 ■ Safety footwear

- If necessary have the thermal insulation fitted by the operating company.

After the installation > Applying thermal insulation

## 6 Commissioning

### 6.1 Safety notices for commissioning

#### Danger of freezing

**WARNING!****Danger of injury due to pipes shattering at freezing temperatures!**

As a result of pipes shattering at freezing temperatures, severe injuries can be caused by fluid under high pressure.

- Ensure that the valve is completely empty before it is taken out of service.
- Never operate valves at temperatures close to, or below the freezing point of the pumping medium.

#### Pumping medium

**WARNING!****Danger of injury due to pumping medium under pressure!**

In operating status, as well as in decommissioned status, depending on the version of the valve, injuries can occur due to medium escaping under high pressure.

- Do not unscrew threaded connections.
- If threaded connections are loose, inform the operating company and have the pipe section in question shut-off.
- If threaded connections are loose have the cause for this clarified and eliminated. If necessary have the manufacturer check the valve.

**WARNING!****Pumping medium is a health hazard!**

Contact with the pumping medium can have health implications.

- Handle pumping medium in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped pumping medium without delay and dispose of it in an environmentally responsible manner.

### Failure to comply with the heating-up times/cooling times



#### **WARNING!**

#### **Danger of injury due to failure to comply with the heating-up times/cooling times!**

Insufficient heating-up times/cooling times may lead to impermissible deformations of the valve and reduction of the total service life.

- Comply with the heating-up times/cooling times (max. 6 K/min (6 °C/min)).
- If in doubt consult with the manufacturer.

### Thermal dangers



#### **WARNING!**

#### **Danger of injury due to high/low temperatures!**

Depending on the insert of the valve or of the pipe, injuries can occur due to the high or low temperature of the components.

- When working on components or activating final control equipment, wear protective equipment: Protective gloves, protective goggles.
- Prior to performing tasks on these components, allow them to cool down/warm up to ambient temperature.
- Have the protective insulation provided by the operating company attached.

### Faulty alignment of the valve



#### **NOTICE!**

#### **Malfunction of the valve due to failure to comply with the flow direction!**

Faulty alignment can result in malfunctions of the overall system.

- Install the valve in accordance with the flow direction arrow (↻ “Flow direction arrow” on page 12) and the flow direction in the pipe.

## 6.2 Prior to commissioning

- Personnel: ■ Pipeline engineer
- Protective equipment: ■ Industrial hard hat  
 ■ Safety goggles  
 ■ Protective work clothing  
 ■ Protective gloves  
 ■ Safety footwear

➔ ensuring that the overall system is released for operation.

## 6.3 Executing the commissioning process

- Personnel: ■ Pipeline engineer  
 ■ Industrial mechanic (high pressure valves)
- Protective equipment: ■ Industrial hard hat  
 ■ Safety goggles  
 ■ Protective work clothing  
 ■ Protective gloves  
 ■ Safety footwear

Prerequisite:

- The overall system must be released for operation.

1. ➔



**WARNING!**


**Failure to comply with the heating-up times/cooling times!**

In compliance with the system-specific heating-up/cooling speed, fill the pipe or open the shut-off pipe section.

2. ➔ Check the pressure sealing bonnet for leaks.

3. ➔ Check the pipe connection flanges for leaks.

Executing the commissioning process

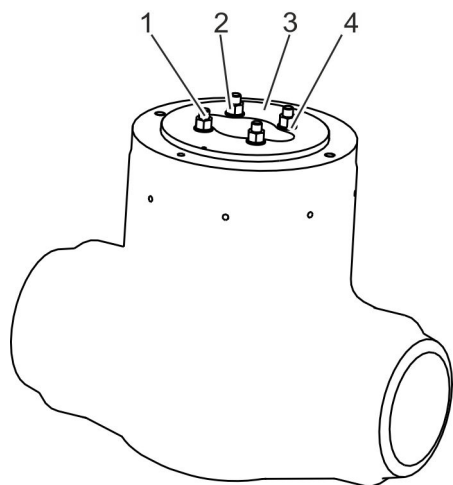

*Fig. 6: Retightening nuts*

4. ➤ If necessary, recheck tightening torque in accordance with the manufacturer's specifications.
5. ➤ Tighten clamping nuts (Fig. 6/2) hand tight.



## 7 Maintenance

### 7.1 Safety instructions for maintenance

#### Improperly executed maintenance tasks

**WARNING!****Danger of injury due to improperly executed maintenance tasks!**

Improper maintenance can cause severe injury or significant material damage.

- Before starting tasks:
  - ensure that there is adequate free space for installation,
  - ensure that the valve is depressurised,
  - ensure that the valve is cooled-down/ warmed-up to ambient temperature,
  - Ensure that the upstream and downstream system for the valve are reliably sealed.
- Ensure order and cleanliness at the installation location! Loosely stacked components or components and tools that are lying about can cause accidents.
- Comply with the following before restarting the system:
  - Ensure that all maintenance tasks have been properly executed and concluded in accordance with the instructions in this manual.
  - Ensure that nobody is in the danger zone.
  - Ensure that all covers and protective devices are installed correctly and that they function properly.

#### Pressurised components

**WARNING!****Danger of injury due to pressurised components!**

Tasks on pressurised components can result in serious injuries.

- Establish depressurised status before working on the valve.

### Heavy weight of the valve



#### **WARNING!**

#### **Danger of injury due to the heavy weight of the valve!**

The heavy weight of the valve, and of its components, can result in severe injuries.

- Transport valves with a suitable hoist or forklift.
- Use approved and functional sling gear.
- Safeguard valves and components from falling over.

### Thermal dangers



#### **WARNING!**

#### **Danger of injury due to high/low temperatures!**

Depending on the insert of the valve or of the pipe, injuries can occur due to the high or low temperature of the components.

- When working on components or activating final control equipment, wear protective equipment: Protective gloves, protective goggles.
- Prior to performing tasks on these components, allow them to cool down/warm up to ambient temperature.
- Have the protective insulation provided by the operating company attached.

### Wrong screw tightening torque



#### **WARNING!**

#### **Danger due to the wrong screw tightening torque!**

The tightening torques of the threaded connections on the valve have been calculated and applied by the manufacturer. Hazards can occur due to unscrewing and subsequent tightening if the wrong tightening torques are used.

- Do not unscrew threaded connections on the valve.
- For maintenance tasks or when unscrewing threaded connections, contact
  - Stahl-Armaturen PERSTA GmbH customer service (contact details p. 3) to request the tightening torques, specifying the serial number, or
  - refer to the manufacturer's website (address on page 2).

**Wrong spare parts****WARNING!****Danger of injury if the wrong spare parts are used!**

Using the wrong or defective spare parts may result in dangers for personnel and damage, malfunction or total machine failure.

- Only use original spare parts from Stahl-Armaturen PERSTA GmbH or spare parts approved by Stahl-Armaturen PERSTA GmbH.
- If you have any questions or if anything is unclear, always contact our customer service organisation (contact details on page 3).

**Spare parts recommendation in the scope of delivery**

*The spare parts recommendation is included in the scope of delivery of the valve.*

**Pumping medium****WARNING!****Danger of injury due to pumping medium under pressure!**

In operating status, as well as in decommissioned status, depending on the version of the valve, injuries can occur due to medium escaping under high pressure.

- Do not unscrew threaded connections.
- If threaded connections are loose, inform the operating company and have the pipe section in question shut-off.
- If threaded connections are loose have the cause for this clarified and eliminated. If necessary have the manufacturer check the valve.



## WARNING!

### **Pumping medium is a health hazard!**

Contact with the pumping medium can have health implications.

- Handle pumping medium in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped pumping medium without delay and dispose of it in an environmentally responsible manner.

## Damage of sealing surfaces and slide faces



## NOTICE!

### **Damage of sealing surfaces and slide faces due to the metallic processing of sealing surfaces and slide faces!**

The metallic processing of sealing surfaces and slide faces and valve parts can cause material damage and valve malfunction.

- Sealing surfaces and slide faces of gaskets must not be
  - scratched with a scraper,
  - processed with wire brushes.
- Sealing surfaces and slide faces must be
  - pulled off with emery cloth,
  - processed with suitable abrasive tools or
  - scraped off with plastic tools/wooden tools.

## 7.2 Maintenance schedule

Maintenance tasks are described in the sections below that are required for optimal and trouble-free valve operation.

If regular inspections indicate increased wear, the required maintenance intervals must be reduced appropriately in accordance with the actual indications of wear. For questions concerning maintenance tasks and intervals, contact Stahl-Armaturen PERSTA GmbH customer service (contact details p. 3).

Interval	Maintenance work	Personnel
Depending on activation frequency, operating and ambient conditions/specified by the operating company	Check the valve visually for leaks ( ↪ <i>Chapter 7.3.1 “Visually checking the valve” on page 45</i> )	Trained person (operator)
Depending on duration of use, operating and ambient conditions	Replace the cover gasket ( ↪ <i>Chapter 7.3.2 “Replacing the gasket of the pressure sealing bonnet” on page 46</i> )	Industrial mechanic (high pressure valves)

## 7.3 Maintenance tasks

### 7.3.1 Visually checking the valve

- Personnel:                   ■ Trained person (operator)
- Protective equipment:   ■ Industrial hard hat
- Safety goggles
- Protective work clothing
- Protective gloves
- Safety footwear

**1.** ➤ Check the cover for leaks.

**2.** ➤ Check the pipe connection flanges for leaks.

### 7.3.2 Replacing the gasket of the pressure sealing bonnet

- |                       |   |
|-----------------------|---|
| Personnel:            | <ul style="list-style-type: none"> <li>■ Industrial mechanic (high pressure valves)</li> <li>■ Trained person (hoist)</li> </ul>  |
| Protective equipment: | <ul style="list-style-type: none"> <li>■ Industrial hard hat</li> <li>■ Safety goggles</li> <li>■ Protective work clothing</li> <li>■ Protective gloves</li> <li>■ Safety footwear</li> </ul> |
| Special tool:         | <ul style="list-style-type: none"> <li>■ Hoist</li> <li>■ Sling gear</li> <li>■ Pin puncher</li> <li>■ Ring nuts</li> <li>■ Ring bolts</li> </ul>   |

Prerequisites:

- The valve must be cooled/heated-up to ambient temperature.
- Depressurised status must have been established.

#### Dismounting the clamping lid

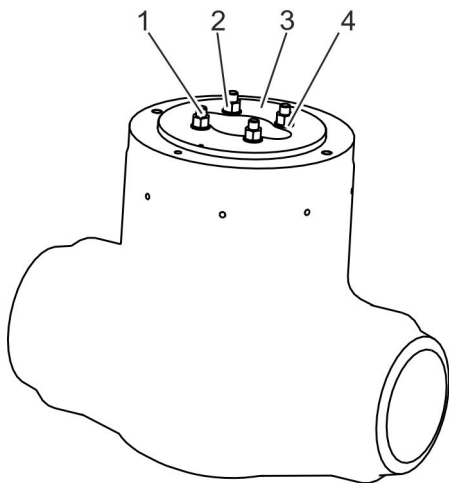


Fig. 7: Unscrewing the nuts from the clamping lid

1. ➔ Unscrew the nuts (Fig. 7/2) on the clamping lid (Fig. 7/3) and remove them together with the washers (Fig. 7/4).

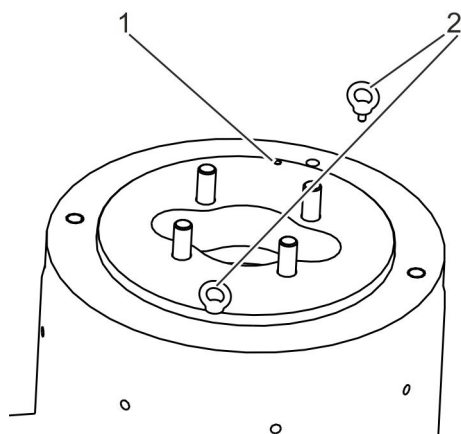


Fig. 8: Screwing the ring bolts into the clamping lid

2. → Screw the ring bolts (Fig. 8/2) into the threaded bores (Fig. 8/1) on the clamping lid.



**CAUTION!**  
Danger of injury due to falling clamping lid!

3. → Ensure that the ring bolts (Fig. 8/2) are fully screwed into the clamping lid.
4. → Attach the ring bolts (Fig. 8/2) to the hoist.
5. → Take the clamping lid off upward and place it next to the valve.

### Remove segment ring

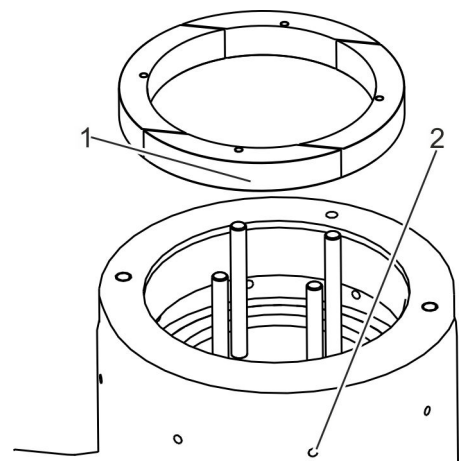


Fig. 9: Removing segments

6. → Using the pin puncher, punch the segments (Fig. 9/1) into the interior and through the outer ejection bores (Fig. 9/2).
7. → Remove the segments (Fig. 9/1).

## Dismount cover

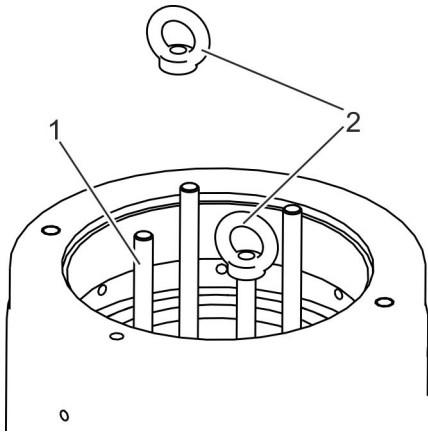


Fig. 10: Attaching the cover with ring nuts

8. ➤ Screw the supplied ring nuts (Fig. 10/2) onto the stud bolts (Fig. 10/1) of the cover.
9. ➤ Ensure that the thread of the ring nuts (Fig. 10/2) is fully screwed onto the stud bolts (Fig. 10/1).
10. ➤ Attach the ring nuts (Fig. 10/2) onto the hoist with suitable sling gear.



**WARNING!**  
Danger of injury due to heavy components!

11. ➤ With a suitable hoist, take the cover with inserted support ring and gasket ring upward and out of the body.
12. ➤ Set the cover with inserted support ring and gasket ring down, outside of the body.

## Preparing the cover for mounting

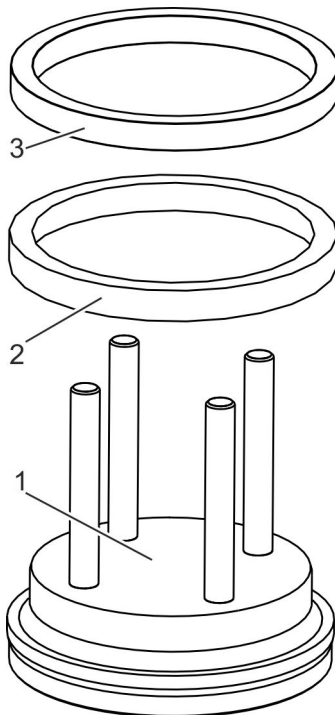


Fig. 11: Fitting the cover with a new gasket ring

13. ➤ Remove the support ring (Fig. 11/3) from the cover (Fig. 11/1).
14. ➤ Remove the gasket ring (Fig. 11/2) from the cover.
15. ➤ Carefully remove the residues of the gasket ring.
16. ➤



**NOTICE!**  
Material damage due to the mechanical processing of support surfaces!

Ensure that all support surfaces are metallic bare and undamaged.

17. ➤ Place the new gasket ring (Fig. 11/2) on the cover (Fig. 11/1).
18. ➤ If required, place a new support ring (Fig. 11/2) on the gasket ring (Fig. 11/1).



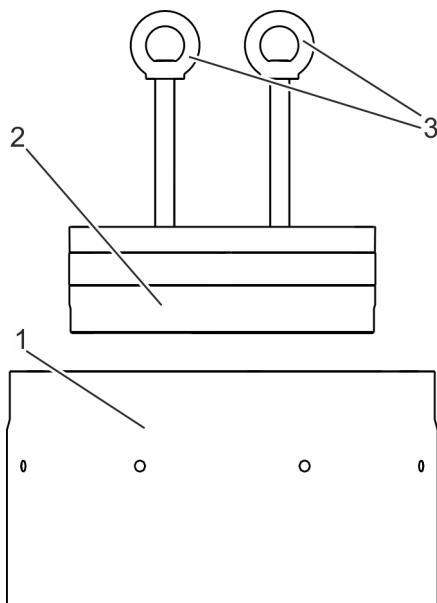


Fig. 12: Inserting the cover

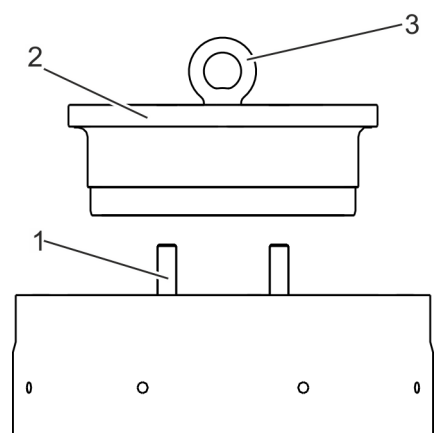


Fig. 13: Screwing the ring bolts into the clamping lid

- 19.** Screw the supplied ring nuts (Fig. 12/3) onto the stud bolts of the cover.
- 20.** Attach the ring nuts (Fig. 12/3) to the hoist and lift the cover (Fig. 12/2) with mounted support and gasket ring over the body (Fig. 12/1).
- 21.** Lower the cover into the body.
- 22.** Ensure that the cover rests in the insert without play.
- 23.** Remove ring nuts.
- 24.** If removed: Screw the ring bolts (Fig. 13/3) into the clamping lid (Fig. 13/2).
- 25.** Attach the ring bolts (Fig. 13/3) to the hoist.
- 26.** Lift the clamping lid (Fig. 13/2) over the body and lower the cover with the bores on the stud bolts (Fig. 13/1).
- 27.** Remove the ring bolts from the clamping lid.

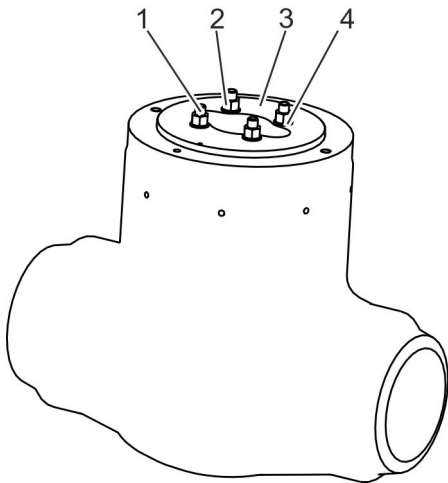


Fig. 14: Bolting the clamping lid

- 28.** Loosely screw together the clamping lid (Fig. 14/3) with washers and nuts (Fig. 14/2) onto the stud bolts (Fig. 14/1) of the cover.

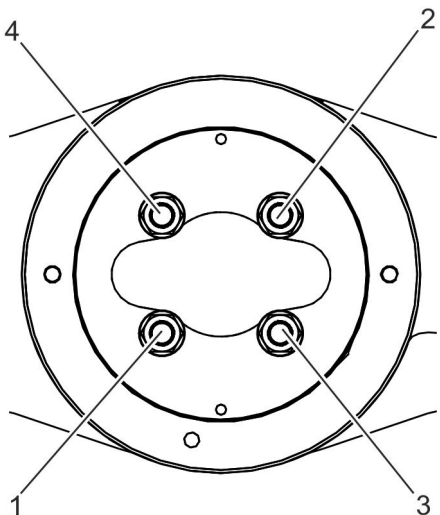


Fig. 15: Tighten nuts in a cross pattern (number of nuts/stud bolts can vary)

- 29.**



**WARNING!**

**Danger due to the wrong screw tightening torque!**

Tighten the nuts (Fig. 15/2) with the prescribed tightening torque in a cross pattern (Fig. 15/1–4).

- 30.**

Perform commissioning work (☞ Chapter 6.3 “Executing the commissioning process” on page 39).

## 7.4 After maintenance

### Executing final tests after replacement

Personnel: ■ Industrial mechanic (high pressure valves)

Protective equipment: ■ Industrial hard hat  
■ Safety goggles  
■ Protective work clothing  
■ Protective gloves  
■ Safety footwear

Prerequisite:

■ Maintenance tasks are concluded.

1. ➤ Charge the valve with permissible test pressure.
2. ➤ Ensure that the valve does not leak.
3. ➤ If necessary, recheck tightening torque in accordance with the manufacturer's specifications.
4. ➤ Retighten clamping lid nuts hand tight.
5. ➤ Perform commissioning work (↪ *Chapter 6.3 "Executing the commissioning process" on page 39*).

After maintenance

## 8 Faults and fault correction

### 8.1 Safety notices for fault correction

#### Safeguard against restart

**DANGER!****Life-threatening danger due to unintended restart!**

The unauthorised switch-on of the energy supply during work poses a danger of severe or fatal injuries for persons in the danger zone.

- Prior to beginning work, switch off all energy supplies and safeguard them from being switched on again.
- Safeguard the system area.

#### Improperly executed fault correction tasks

**WARNING!****Danger of injury due to improper fault correction!**

Improperly executed fault correction tasks can cause severe injury and significant material damage.

- For faults that require intervention, only correct them after you have ensured that
  - the system area in question is secured
  - the valve is depressurised
  - the valve has cooled-down/warmed-up to ambient temperature.
- If in doubt, obtain the assistance of experienced persons or contact Stahl-Armaturen PERSTA GmbH Customer Service.
- Comply with the following before restarting the system:
  - Ensure that all fault correction tasks have been properly executed and concluded in accordance with the instructions in this manual.
  - Ensure that nobody is in the danger zone.
  - Ensure that all covers and protective devices are installed correctly and that they function properly.

### Thermal dangers



#### **WARNING!**

#### **Danger of injury due to high/low temperatures!**

Depending on the insert of the valve or of the pipe, injuries can occur due to the high or low temperature of the components.

- When working on components or activating final control equipment, wear protective equipment: Protective gloves, protective goggles.
- Prior to performing tasks on these components, allow them to cool down/warm up to ambient temperature.
- Have the protective insulation provided by the operating company attached.

### Pumping medium



#### **WARNING!**

#### **Danger of injury due to pumping medium under pressure!**

In operating status, as well as in decommissioned status, depending on the version of the valve, injuries can occur due to medium escaping under high pressure.

- Do not unscrew threaded connections.
- If threaded connections are loose, inform the operating company and have the pipe section in question shut-off.
- If threaded connections are loose have the cause for this clarified and eliminated. If necessary have the manufacturer check the valve.



#### **WARNING!**

#### **Pumping medium is a health hazard!**

Contact with the pumping medium can have health implications.

- Handle pumping medium in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped pumping medium without delay and dispose of it in an environmentally responsible manner.

## Behaviour if there are dangerous faults

The following always applies:

1. ➔ For faults that pose an imminent danger to personnel or material assets, immediately trigger the emergency stop function.
2. ➔ Determine the fault cause.
3. ➔ If correction of the fault requires work in the danger zone, secure the system area in question, and depressurise the valve.
4. ➔ Have faults that affect the safe operation of the valve corrected by the manufacturer.

## 8.2 Fault table

Fault description	Cause	Remedy	Personnel
Leakage of the shut-off device	Solids in the medium that have damaged the seat	Grind the seat, if necessary have damaged parts replaced.	Industrial mechanic (high pressure valves)
	Deformation of the seat surface due to impermissible high tensioning of the valve or through thermal tensions	Grind the seat, if necessary have damaged parts replaced. Determine the cause of the deformation and have it eliminated.	Industrial mechanic (high pressure valves)
	Erosion or corrosion, e.g. due to the wrong selection of nominal valve width or valve material	Have the design of the valve checked.	Industrial mechanic (high pressure valves)
	Swing check valve does not close/does not close tight	Dismount the swing check valve and determine the cause for malfunction and have it eliminated by Stahlaraturen PERSTA GmbH customer service (contact details p. 3) or an external specialised company.  ☞ Chapter 8.3.1 "Dismounting the swing check valve" on page 57  ☞ Chapter 8.3.2 "Mounting the swing check valve" on page 59	Industrial mechanic (high pressure valves)
Swing check valve does not open	Mimic element of swing check valve is defective	Dismount the swing check valve and determine the cause for malfunction and have it eliminated by Stahlaraturen PERSTA GmbH customer service (contact details p. 3) or an external specialised company.  ☞ Chapter 8.3.1 "Dismounting the swing check valve" on page 57	Industrial mechanic (high pressure valves)

Fault table

Fault description	Cause	Remedy	Personnel
Swing check valve does not open	Mimic element of swing check valve is defective	☞ <i>Chapter 8.3.2 "Mounting the swing check valve" on page 59</i>	
Leakage of the pressure sealing bonnet	Sealing gasket is defective	Dismount the pressure sealing bonnet. Replacing the gasket ring (☞ <i>Chapter 7.3.2 "Replacing the gasket of the pressure sealing bonnet" on page 46</i> ).	Industrial mechanic (high pressure valves)



### 8.3 Fault correction work

#### 8.3.1 Dismounting the swing check valve



#### **Processing of the swing check valve by an external specialised company**

Only the removal of the swing check valve from the body is described below. Tasks such as

- Separating the swing check valve and retaining ring, as well as
- Processing of the swing check valve

should be executed by an external specialised company or by Stahl-Armaturen PERSTA GmbH Customer Service.

- |                       |   |
|-----------------------|---|
| Personnel:            | <ul style="list-style-type: none"> <li>■ Industrial mechanic (high pressure valves)</li> <li>■ Trained person (hoist)</li> </ul>  |
| Protective equipment: | <ul style="list-style-type: none"> <li>■ Industrial hard hat</li> <li>■ Safety goggles</li> <li>■ Protective work clothing</li> <li>■ Protective gloves</li> <li>■ Safety footwear</li> </ul> |
| Special tool:         | <ul style="list-style-type: none"> <li>■ Hoist</li> <li>■ Sling gear</li> <li>■ Pin puncher</li> <li>■ Ring nuts</li> <li>■ Ring bolts</li> <li>■ Pull-off device</li> </ul>                  |

#### Prerequisites:

- The valve must be cooled/heated-up to ambient temperature.
- Depressurised status must have been established.

#### Dismount cover

1. ➔ Dismount the cover as described in [Chapter 7.3.2](#) "Replacing the gasket of the pressure sealing bonnet" on page 46/step 1–12.

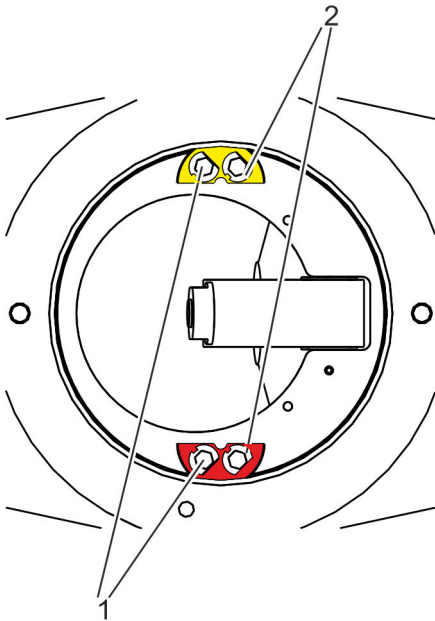


Fig. 16: Looking into the body from above

2. ➤ Unbend the washers (Fig. 16/2).

Unscrew the bolts (Fig. 16/1) and remove them from the body with the washers (Fig. 16/2).

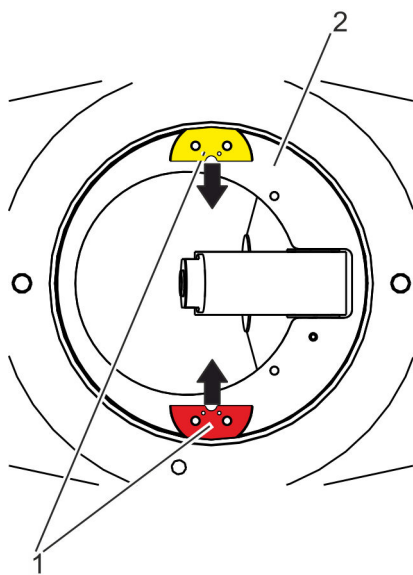


Fig. 17: Removing retaining washers

3. ➤ Push the retaining washers (Fig. 17/1) to the interior and remove from the body.

⇒ The retaining ring (Fig. 17/2) is no longer tensioned in the body.



**WARNING!**

**Danger of injury due to heavy components!**

4. ➤ With a suitable pull-off tool, take the retaining ring and attached swing check valve upward and out of the body.

## 8.3.2 Mounting the swing check valve



### **Processing of the swing check valve by an external specialised company**

Only the installation of the swing check valve in the body is described below. Tasks such as

- Processing of the swing check valve as well as
- attachment of the swing check valve on the retaining ring

should be executed by an external specialised company or by Stahl-Armaturen PERSTA GmbH Customer Service.

- Personnel:
- Industrial mechanic (high pressure valves)
  - Trained person (hoist)

- Protective equipment:
- Industrial hard hat
  - Safety goggles
  - Protective work clothing
  - Protective gloves
  - Safety footwear

- Special tool:
- Hoist
  - Sling gear
  - Ring nuts
  - Ring bolts
  - Pull-off device

Prerequisites:

- The swing check valve must have been mounted on the retaining ring.
- The body of the valve must have been prepared for mounting the swing check valve.



### **WARNING!**

**Danger of injury due to heavy components!**

1. ➤ With a suitable pull-off tool, insert the retaining ring and attached swing check valve into the body from above.
2. ➤ Ensure that the swing check valve can open completely.

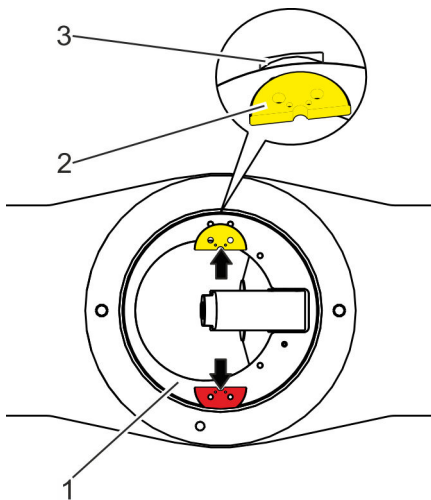


Fig. 18: Mounting the retaining washers

3. ➔ Place the retaining washers (Fig. 18/2) on the retaining ring (Fig. 18/1) and push into the grooves (Fig. 18/3) in the body.

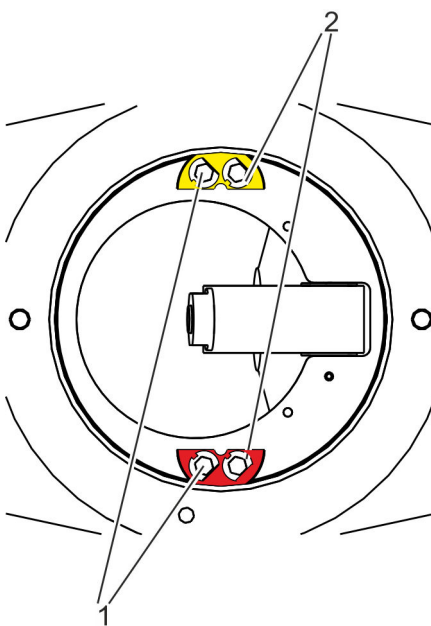


Fig. 19: Fastening the retaining ring

4. ➔ Fasten the retaining washers (Fig. 18/2) with washers (Fig. 19/2) and screws (Fig. 19/1) on the retaining ring.



### WARNING!

**Danger of injury due to the wrong tightening torque!**

5. ➔ Tighten the screws (Fig. 19/1) with the prescribed tightening torque.
6. ➔ Bend the washers (Fig. 19/2) on one side.
  - ⇒ The screws (Fig. 19/1) cannot be removed.
7. ➔ Mount the cover and clamping lid as described in [Chapter 7.3.2 "Replacing the gasket of the pressure sealing bonnet"](#) on page 46/step 13–29.
8. ➔ Perform commissioning work ([Chapter 6.3 "Executing the commissioning process"](#) on page 39).

## 9 Dismantling, disposal

### 9.1 Safety notice for dismantling and disposal

#### Pumping medium

**WARNING!****Danger of injury due to pumping medium under pressure!**

In operating status, as well as in decommissioned status, depending on the version of the valve, injuries can occur due to medium escaping under high pressure.

- Do not unscrew threaded connections.
- If threaded connections are loose, inform the operating company and have the pipe section in question shut-off.
- If threaded connections are loose have the cause for this clarified and eliminated. If necessary have the manufacturer check the valve.

**WARNING!****Pumping medium is a health hazard!**

Contact with the pumping medium can have health implications.

- Handle pumping medium in accordance with the instructions in the manufacturer's safety data sheet.
- Wear protective equipment: Protective gloves, safety footwear, protective goggles, protective work clothing.
- Soak up escaped pumping medium without delay and dispose of it in an environmentally responsible manner.

### Improper dismantling



#### **WARNING!**

#### **Danger of injury due to improper dismantling!**

Stored residual energy, sharp-edged components, points and corners on or in the valve, or on the required tools can cause serious injury.

- Prior to starting work ensure that there is adequate free space.
- Handle open, sharp-edged components carefully.
- Ensure order and cleanliness at the workstation! Loosely stacked components or components and tools that are lying about can cause accidents.
- Dismantle components properly. Pay attention to the high dead weight of some of the components. If necessary use hoists.
- Secure the components so that they do not fall down or fall over.
- If anything is unclear obtain the assistance of Stahl-Armaturen contact PERSTA GmbH customer service (contact details p. 3).

### Heavy weight of the valve



#### **WARNING!**

#### **Danger of injury due to the heavy weight of the valve!**

The heavy weight of the valve, and of its components, can result in severe injuries.

- Transport valves with a suitable hoist or forklift.
- Use approved and functional sling gear.
- Safeguard valves and components from falling over.

## Suspended loads



### WARNING!

#### Danger of injury due to suspended loads!

Suspended loads can cause dangerous situations that can result in severe injuries.

- Do not step under suspended loads.
- Wear protective equipment: Industrial hard hat, safety footwear.
- Transport loads as close to the ground as possible.
- Only use approved sling gear and hoists.
- Ensure that hoist and sling gear have sufficient load-bearing capacity.

## 9.2 Dismantling

- |                       |   |
|-----------------------|---|
| Personnel:            | <ul style="list-style-type: none"> <li>■ Industrial mechanic (high pressure valves)</li> <li>■ Forklift truck driver</li> <li>■ Trained person (operator)</li> <li>■ Trained person (hoist)</li> <li>■ Disposal contractor</li> </ul> |
| Protective equipment: | <ul style="list-style-type: none"> <li>■ Industrial hard hat</li> <li>■ Safety goggles</li> <li>■ Protective work clothing</li> <li>■ Protective gloves</li> <li>■ Safety footwear</li> </ul>   |
| Special tool:         | <ul style="list-style-type: none"> <li>■ Hoist</li> <li>■ Sling gear</li> </ul>   |

### Prerequisites:

- The pipe section in question is shut-off.
  - Valve is in depressurised status.
  - Valve is emptied.
- 1.** ➤ Hold the valve in position with a suitable hoist (☞ *“Transporting individual valves” on page 28*).
  - 2.** ➤ Disconnect pipe inlet side and outlet side from the valve.
  - 3.** ➤ If necessary remove the existing supports.
  - 4.** ➤ Use a suitable hoist to remove the valve from the pipe and set it down so that it is safeguarded against falling over.
  - 5.** ➤ Properly clean assemblies and components and take them apart.

In this process comply with local occupational health and safety regulations.

### 9.3 Disposal

If a return or disposal agreement has not been concluded, then recycle dismantled components:

- Scrap metals.
- Recycle plastic elements.
- Sort and dispose of all other components according to material condition.



#### **ENVIRONMENT!**

#### **Hazards for the environment due to improper disposal!**

Hazards for the environment can occur due to improper disposal.

- Have electrical scrap and electronic components, lubricants and other auxiliary materials recycled or disposed of by approved specialist companies.
- If in doubt, contact the local authorities or specialist disposal companies for information regarding the environmentally compatible disposal.



## 10 Index

### B

Brief description . . . . .	7
Butt-weld valve . . . . .	25

### C

Clamping lid . . . . .	24
Connection . . . . .	25
Cover . . . . .	24

### D

Dismantling . . . . .	63
Dismounting the swing check valve . . . . .	57
Disposal . . . . .	64

### E

Emergency situation . . . . .	16
End maintenance . . . . .	51
Environmental protection . . . . .	22
Executing the commissioning process . . . . .	39

### F

Fault table . . . . .	55
Flanged valve . . . . .	25
Flow direction arrow . . . . .	12
Freezing temperatures can shatter pipes . . . . .	14, 37

### H

Heating-up times/cooling times . . . . .	39
Hydrostatic pressure test . . . . .	35

### I

Installing the valve . . . . .	33
Instruction . . . . .	19
Insulating the valve . . . . .	35
Intended use . . . . .	11

### L

Leak test . . . . .	35
Leakages . . . . .	55
Leaks	
Cover . . . . .	55

Shut-off device . . . . .	55
---------------------------	----

### M

Maintenance schedule . . . . .	44
Malfunctions . . . . .	55
Markings . . . . .	12
Misuse . . . . .	11
Mode of operation . . . . .	23

### O

Operating company . . . . .	16
Order numbers . . . . .	21
Ordering spare parts . . . . .	21

### P

Painting the valve . . . . .	35
Personal protective equipment . . . . .	20
Personnel . . . . .	18
Pickling . . . . .	34
Pickling medium . . . . .	34
Pickling the valve . . . . .	34
Preparing for commissioning . . . . .	39
Preparing for installation . . . . .	32
Pressure sealing bonnet . . . . .	24, 46
Principle . . . . .	23
Protective equipment . . . . .	20

### R

Rating plate . . . . .	12
Replacing the gasket . . . . .	46
Residual risks . . . . .	13
Retaining ring . . . . .	57

### S

Safety signs . . . . .	12
Seal . . . . .	24
Segment ring . . . . .	24
Signs . . . . .	12
Spare parts . . . . .	21, 43
Special connection valve . . . . .	25

Storage .....	30	<b>T</b>	
Storing the valve .....	30	Tools .....	7
Support ring .....	24	transporting a pallet .....	29
Swing check valve		Transporting the valve .....	28
Malfunction .....	55, 57	<b>U</b>	
mount .....	59	Use .....	11
Symbols		<b>V</b>	
in the manual .....	9	Visually checking the valve .....	45
On the valve .....	12		
System pressure test .....	35		